



**Remove**

---


- 1 Remove door cover (72—100, section B).
- 2 Remove plastic foil.
- 3 Loosen sealing frame from guide retainer.
- 4 Unscrew both screws (arrow) at guide retainer.
- 5 Remove inner sealing rail.

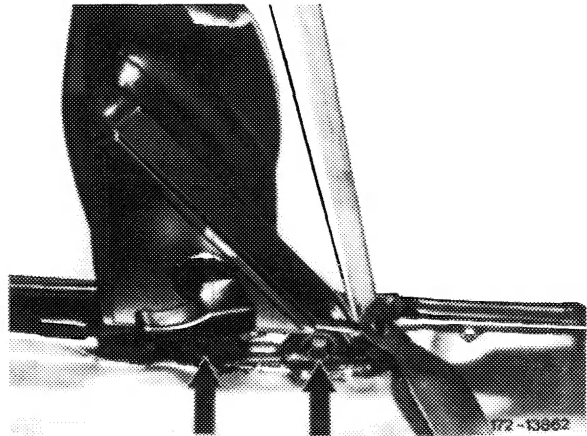

- 6 Unscrew nut at the front guide rail.
- 7 Wind up crank window.
- 8 Push out guide retainer below from the pivot and remove lock nut from thread stud.
- 9 Wind down crank window.

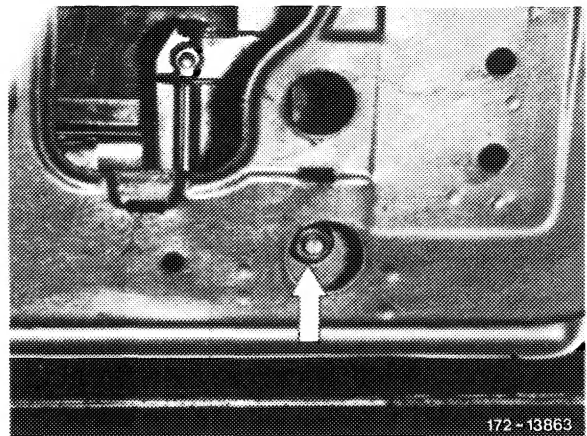

- 10 Pull out guide rail at the top of the door shell.  
To do so, it is necessary to turn the guide rail by 90° so that the thread stud welded to the lower part does not impair removal.

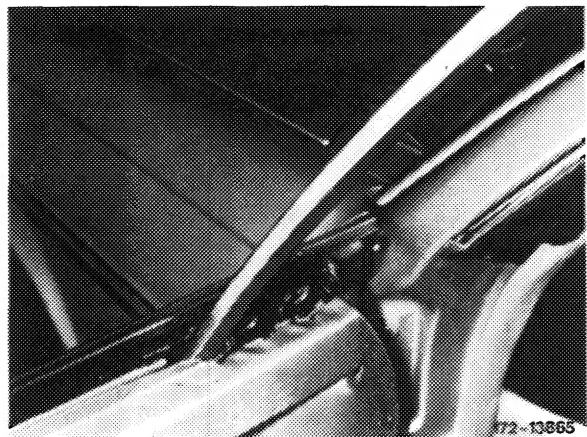

## Install

---

11 Installation takes place in reverse order.

